




STEP ONE

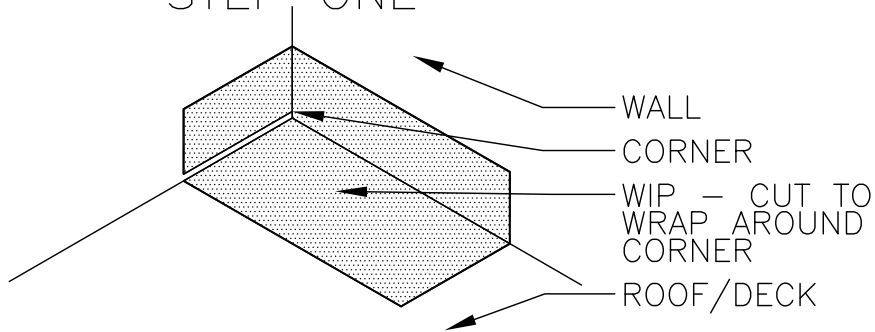

STEP TWO

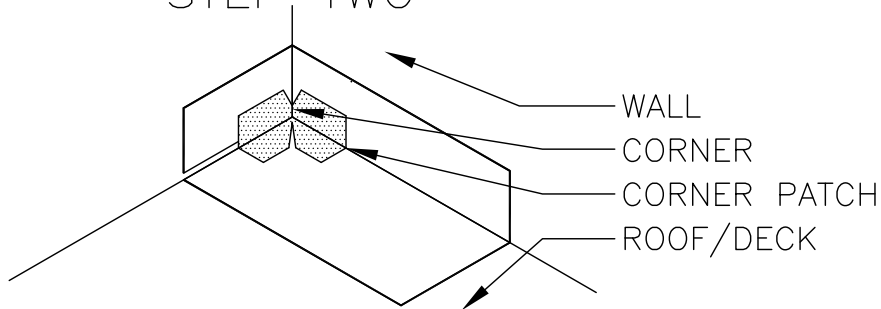


STEP THREE

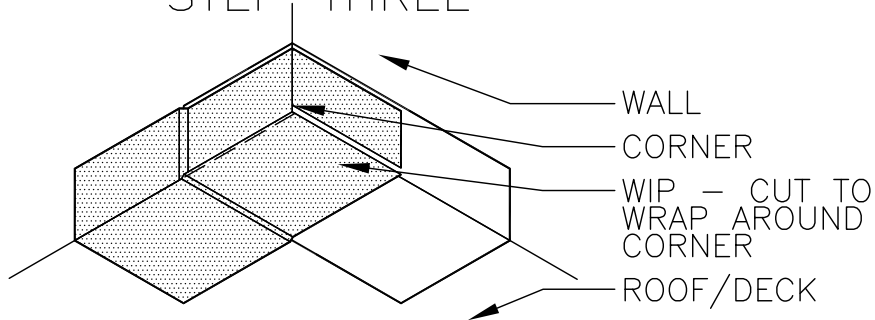


INSIDE CORNER FLASHING


STEP ONE

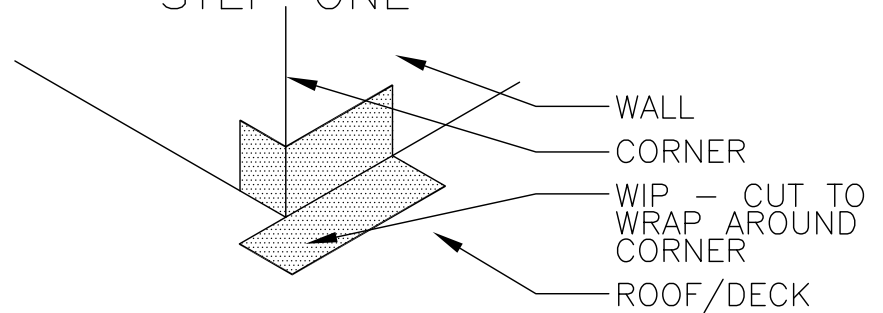

STEP TWO

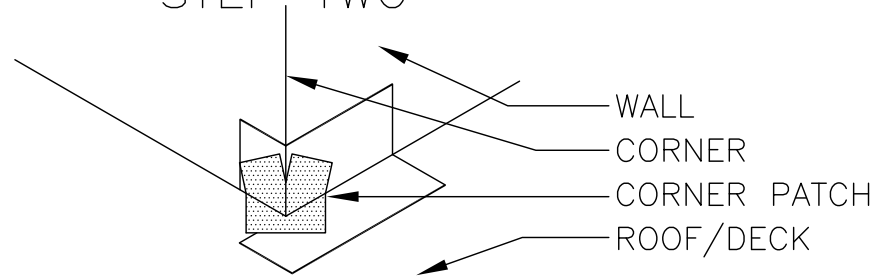

STEP THREE

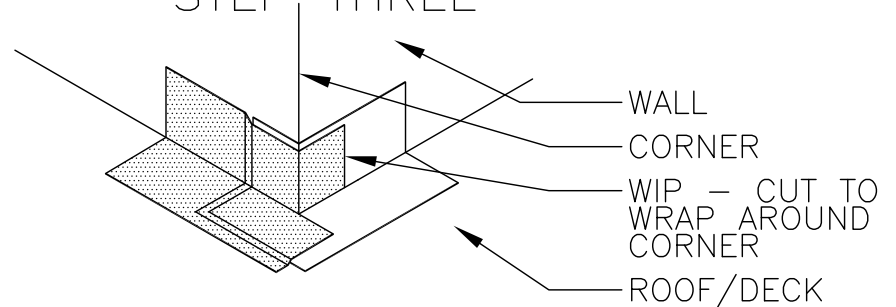

OUTSIDE CORNER FLASHING

NOTES:

1. THE SUBSTRATE HAS TO BE CLEAN AND DRY.
2. RELEASE PAPER IS REMOVED AT TIME OF INSTALLATION.
3. ALL MASONRY OR CONCRETE HAS TO BE PRIMED.
4. WORK FROM BOTTOM OF SLOPE UP THE ROOF TO FORM WATER SHEDDING LAPS.
5. MODIFY RELIEF CUTS IN PATCH AS REQUIRED.

WIP-13

WIP INSIDE/ OUTSIDE
CORNER DETAILS

CARLISLE
WIP PRODUCTS

© 2013 CARLISLE CORPORATION